



Q = fuel system FS = Fuel Senders FG = Fuel Gauge

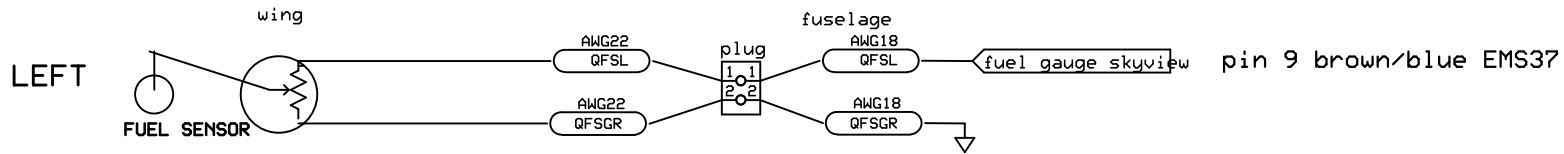

Q= circuit essence  
 FG= Fuel gauge  
 L= left R= Right Gr= ground

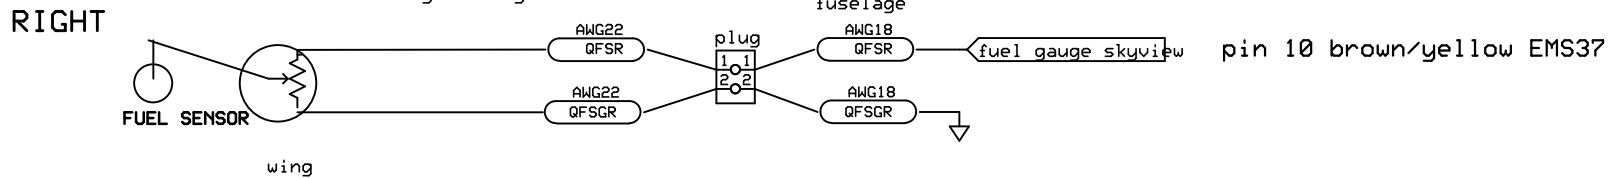

FUEL TANK SENDERS ARE GROUNDED AT THE ATTACH PLATES  
 WING ROOT PLUG FOR GROUNDING FUEL SENDERS AND WING

